





# Installation and Operation Manual for **EVOTHERM ETI INVERTER HEAT PUMP**

**ETI 30T** 

## **△ WARNING**

This equipment must be installed and serviced by a qualified technician. Improper installation can create electrical hazards which could result in property damage, serious injury or death. Improper installation will void the warranty.

## **%** NOTICE TO INSTALLER

This manual contains important information about the installation, operation and safe use of this product. Once the product has been installed this manual must be given to the owner/operator of this equipment.



## CONTENT

1. FUREWURD	1
1.1. Read the Manual Before Operation	1
1.2. The Symbol Description of the Device	5
1.3. Statement	5
1.4. Safety Factors	5
2. OVER VIEW OF THE UNIT	7
2.1. Accessories Supplied With the Unit	7
2.2. Dimensions of the Unit	7
2.3. Main Parts of the Unit	8
2.4. Parameter of the Unit	9
3. INSTALLATION AND CONNECTION	9
3.1. Notice Before Installation	10
3.2. Installation Instruction	10
3.2.1 Pre-requirements	10
3.2.2 Heat Pump Installation	10
3.2.3 Location and Space	11
3.2.4 Installation Layout	11
3.3.5 Electrical Installation	14
3.3.6 Electrical Connection	14
3.3. Trial After Installation	16
3.4.1 Inspection Before Trial Running	16
3.4.2 Trial Running	16
4. REMOTE CONTROLLER OPERATION GUIDANCE	17
4.1. Control Panel Diagram	17
4.2. Basic Icons	17
4.3. Key Operating Instruction	17
4.4. System Protection and Error Code	22

5. WI-FI MODULE AND APP USER INSTRUCTION       26         5.1. Wi-Fi Box       26         5.2. Wi-Fi Function       27         5.2.1 Software Installation       27         5.2.2 Software Startup       27         5.2.3 Software Registration and Configuration       28         5.2.4 Software Function Operation       36         5.2.5 Device Removal       41         6. MAINTENANCE AND WINTERZING       43         6.1. Maintenance       43         6.2. Winterizing       43	4.5.	Other Malfunctions and Solutions (No display on wire controller)	.24
5.2. Wi-Fi Function       27         5.2.1 Software Installation       27         5.2.2 Software Startup       27         5.2.3 Software Registration and Configuration       28         5.2.4 Software Function Operation       36         5.2.5 Device Removal       41         6. MAINTENANCE AND WINTERZING       43         6.1. Maintenance       43	5. WI-FI	MODULE AND APP USER INSTRUCTION	.26
5.2.1 Software Installation       27         5.2.2 Software Startup       27         5.2.3 Software Registration and Configuration       28         5.2.4 Software Function Operation       36         5.2.5 Device Removal       41         6. MAINTENANCE AND WINTERZING       43         6.1. Maintenance       43	5.1.	Wi-Fi Box	.26
5.2.2 Software Startup	5.2.	Wi-Fi Function	.27
5.2.3 Software Registration and Configuration		5.2.1 Software Installation	.27
5.2.4 Software Function Operation		5.2.2 Software Startup	.27
5.2.5 Device Removal		5.2.3 Software Registration and Configuration	.28
6. MAINTENANCE AND WINTERZING43 6.1. Maintenance43		5.2.4 Software Function Operation	.36
6.1. Maintenance43		5.2.5 Device Removal	.41
	6. MAIN	ITENANCE AND WINTERZING	.43
6.2. Winterizing43	6.1.	Maintenance	.43
	6.2.	Winterizing	.43

## 1. FOREWORD

## 1.1. Read the Manual Before Operation

#### **WARNING**

Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer. The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).

Do not pierce or burn.

Be aware that refrigerants may not contain an odour.

### Initial safety checks shall include:

- ① That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking:
- 2 That no live electrical components and wiring are exposed while charging, recovering or purging the system;
- 3 That there is continuity of earth bonding.

#### Checks to the area

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the refrigerating system, the following precautions shall be completed prior to conducting work on the system.

### Work procedure

Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapour being present while the work is being performed.

#### General work area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided.

### Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

### Presence of fire extinguisher

If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO2 fire extinguisher adjacent to the charging area.

#### No ignition sources

No person carrying out work in relation to a refrigeration system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which flammable refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

#### Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and

1

preferably expel it externally into the atmosphere.

### Checks to the refrigeration equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants:

- ① The charge size is in accordance with the room size within which the refrigerant containing parts are installed;
- 2 The ventilation machinery and outlets are operating adequately and are not obstructed;
- ③ If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- 4 Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- ⑤ Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

### Repairs to sealed components

**DD.5.1** During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.

**DD.5.2** Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.

Ensure that the apparatus is mounted securely.

Ensure that seals or sealing materials have not degraded to the point that they no longer serve the purpose of preventing the ingress of flammable atmospheres. Replacement parts shall be in accordance with the manufacturer's specifications.

### Repair to intrinsically safe components

Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use. Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating.

Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

NOTE: The use of silicon sealant can inhibit the effectiveness of some types of leak detection equipment.

Intrinsically safe components do not have to be isolated prior to working on them.

#### Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

#### **Detection of flammable refrigerants**

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

#### Leak detection methods

The following leak detection methods are deemed acceptable for systems containing flammable

refrigerants.

Electronic leak detectors shall be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed.

Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

If a leak is suspected, all naked flames shall be removed/extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. Oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

#### Removal and evacuation

When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used. However, it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:

- Remove refrigerant;
- 2 Purge the circuit with inert gas;
- 3 Evacuate;
- 4 Purge again with inert gas;
- ⑤ Open the circuit by cutting or brazing.

The refrigerant charge shall be recovered into the correct recovery cylinders. The system shall be "flushed" with OFN to render the unit safe. This process may need to be repeated several times. Compressed air or oxygen shall not be used for this task.

Flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system. When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place. This operation is absolutely vital if brazing operations on the pipework are to take place.

Ensure that the outlet for the vacuum pump is not close to any ignition sources and there is ventilation available.

#### **Charging procedures**

In addition to conventional charging procedures, the following requirements shall be followed:

- ① Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them. Cylinders shall be kept upright.
- ② Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
- 3 Label the system when charging is complete (if not already).
- ④ Extreme care shall be taken not to overfill the refrigeration system. Prior to recharging the system it shall be pressure tested with OFN. The system shall be leak tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

#### Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.

- ① Become familiar with the equipment and its operation.
- ② Isolate system electrically.

- 3 Before attempting the procedure ensure that:
- Mechanical handling equipment is available, if required, for handling refrigerant cylinders;
- All personal protective equipment is available and being used correctly;
- The recovery process is supervised at all times by a competent person;
- Recovery equipment and cylinders conform to the appropriate standards.
- 4 Pump down refrigerant system, if possible.
- ⑤ If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- 6 Make sure that cylinder is situated on the scales before recovery takes place.
- ② Start the recovery machine and operate in accordance with manufacturer's instructions.
- 8 Do not overfill cylinders. (No more than 80 % volume liquid charge).
- 9 Do not exceed the maximum working pressure of the cylinder, even temporarily.
- When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- 11 Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

## Labeling

Equipment shall be labeled stating that it has been decommissioned and emptied of refrigerant. The label shall be dated and signed. Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

### Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely. When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge are available. All cylinders to be used are designated for the recovered refrigerant and labeled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerants.

In addition, a set of calibrated weighing scales shall be available and in good working order.

Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.

The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

## 1.2. The Symbol Description of the Device

The precautions listed here are divided into the following types. They are quite important, so be sure to follow them carefully. Meanings of DANGER, WARNING, CAUTION and NOTE symbols.

Symbols	Meaning	Description
	WARNING	The symbol shows that this appliance uses a flammable refrigerant. If the refrigerant is leaked and exposed to an external ignition source, there is a risk of fire.
	WARNING	The symbol shows that this appliance uses a low burning velocity material. Please keep away from fire source.
	CAUTION	This symbol shows that the operation manual should be read carefully.
	CAUTION	This symbol shows that a service personnel should be handling this equipment with reference to the installation manual.
i	CAUTION	This symbol shows that information is available such as the operating manual or installation manual.

## 1.3. Statement

To keep users under safe working condition and property safety, please follow the instructions below :

- 1) Wrong operation may result in injury or damage:
- 2 Please install the unit in compliance with local laws, regulations and standards;
- 3 Confirm power voltage and frequency;
- 4 The unit is only used with grounding sockets;
- (5) Independent switch must be offered with the unit.

## 1.4. Safety Factors

The following safety factors need to be considered:

- 1 Please read the following warnings before installation:
- 2 Be sure to check the details that need attention, including safety factors;
- 3 After reading the installation instructions, be sure to save them for future reference.



Make sure that the unit is installed safely and reliably.

- If the unit is not secure or not installed, it may cause damage. The minimum support weight required for installation is 21g/mm²
- If the unit was installed in a closed area or limited space, please consider the size of room and ventilation to prevent suffocation caused by refrigerant leakage.
- ① Use a specific wire and fasten it to terminal block so that the connection will prevent pressure from being applied to parts.
- 2 Wrong wiring will cause fire.

Please connect power wire accurately according to wiring diagram on the manual to avoid burnout of the unit or fire.

3 Be sure to use correct material during installing.

Wrong parts or wrong materials may result in fire, electric shock, or falling of the unit.

(4) Install on the ground safely, please read installation instructions.

Improper installation may result in fire, electric shock, falling of the unit, or water leaking.

(5) Use professional tools for doing electrical work.

If power supply capacity is insufficient or circuit is not completed, it may cause fire or electric shock.

6 The unit must have grounding device.

If power supply does not have grounding device, be sure not to connect the unit.

7) The unit should be only removed and repaired by professional technician.

Improper movement or maintenance of the unit may cause water leakage, electric shock, or fire. Please find a professional technician to do.

- Don't unplug or plug power during operation. It may cause fire or electric shock.
- 9 Don't touch or operate the unit when your hands are wet. It may cause fire or electric shock.
- (10) Don't place heaters or other electrical appliances near the power wire. It may cause fire or electric shock.
- 11 The water must not be poured directly from the unit. Do not let water to permeate into the electrical components.



## Warning

- 1) Do not install the unit in a location where there may be flammable gas.
- ② If there is flammable gas around the unit, it will cause explosion.

According to the instruction to carry out drainage system and pipeline work. If drainage system or pipeline is defective, water leakage will occur. And it should be disposed immediately to prevent other household products from getting wet and damage.

- 3 Do not clean the unit while power is on. Turn off power before cleaning the unit. If not it may result in injury from a high-speed fan or electric shock.
- 4) Stop operating the unit once there is a problem or a fault code.

Please turn off power and stop running the unit. Otherwise it may cause electric shock or fire.

(5) Be careful when the unit is not packed or not installed.

Pay attention to sharp edges and fins of heat exchanger.

6 After installation or repair, please confirm refrigerant is not leaking.

If refrigerant is not enough, the unit will not work properly.

7 The installation of external unit must be flat and firm.

Avoid abnormal vibration and noise.

8 Don't put your fingers into fan and evaporator.


High speed running fan will result in serious injury.

(9) This device is not designed for people who is physically or mentally weak (including children) and who does not have experience and knowledge of heating and cooling system. Unless it is used under direction and supervision of professional technician, or has received training on the using of this unit. Children must use it under supervision of an adult to ensure that they use the unit safely. If power wire is damaged, it must be replaced by a professional technician to avoid danger.

## 2. OVER VIEW OF THE UNIT


## 2.1. Accessories Supplied With the Unit

After unpacking, please check if you have all the following components.

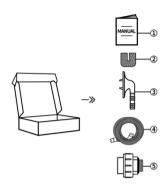

NO.	Components	Quantity	NO.	Components	Quantity
1	User Manual	1	4	Drain Pipe	1
2	Rubber Blanket	4	5	Water Pipe Joint	2
3	Drain Connector	1			


## 2.2. Dimensions of the Unit

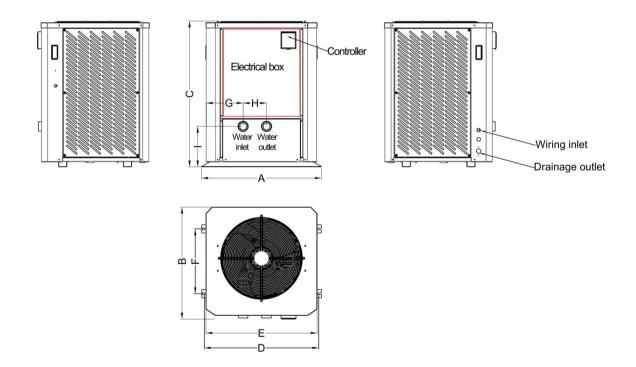

Dimension Unit: (mm)

	Α	В	С	D	E	F	G	Н	I
EFI Ultra V30T	900	812	1054	865	846	500	252	145	268

## 2.3. Main Parts of the Unit

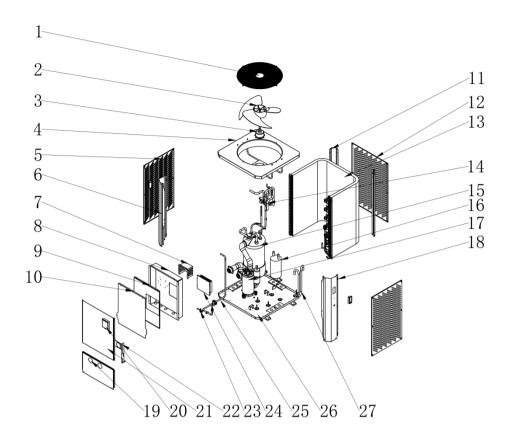

1	Fan protection cover	10	Electrical box 3		Front panel 1
2	Fan	11	Stand column 2	20	Controller
3	Fan motor	12	Metal mesh cover 2	21	Front panel 2
4	Top cover plate	13	Fin heat exchanger	22	Fixed plate
5	Metal mesh cover	14	Four way valve welding assembly	23	Globe valve
6	Stand column 1	15	Titanium tube heat exchanger	24	Drive board
7	Damper	16	Gas liquid separator	25	Filter welding components
8	Electrical box 1	17	Inverter compressor	26	Chassis components
9	Electrical box 2	18	Stand column 3	27	Inlet piping components

## 2.4. Parameter of the Unit

## Table-1

Model	EFI Ultra V30T			
Air Temperature: 27°C, inlet/outlet water temperature: 26°C28°C, humidity 80%				
Heating capacity (kW)	11.7-29.81			
Power input (kW)	0.79-4.45			
COP	14.81-6.7			
Air Temperature: 15°C, inlet/outlet water tem	perature: 26°C28°Ghumidity 70%			
Heating capacity (kW)	8.96-22.35			
Power input (kW)	1.31-4.50			
COP	6.84-4.96			
Air Temperature: 35°C, inlet/outlet water tem	perature: 28°C26°C			
Cooling capacity (kW)	5.56-17.4			
Power input (kW)	1.11-6.7			
EER (kW)	5.01-2.64			
Power supply (V/Ph/Hz)	380-415V/3N~/50Hz			
Max power input (kW)	7.3			
Max current (A)	13.0			
Setting temperature range (Heating)	15°C~40°C			
Setting temperature range (Cooling)	8°C~28°C			
Running temperature range	-10°C~43°C			
Refrigerant	R32			
Compressor	MITSUBISHI ELECTRIC ( DC inverter)			
Air side heat exchanger	Hydrophilic fin and tube			
Water side heat exchanger	Titanium PVC Tank			
Water flow (LPM)	190			
Net dimension LxWxH (mm)	900x812x1054			
Water pipe connection (mm)	40/50			
Net weight (kg)	137			
Noise level dB(A)	46-68			
Water proof level	IPX4			


## 3. INSTALLATION AND CONNECTION

**WARNING:** The heat pump must be installed by a professional team. The users are not qualified to install by themselves, otherwise the heat pump might be damaged and risky for users' safety.

This section is provided for information purposes only and must be checked and adapted if necessary according to the actual installation conditions.

## 3.1. Notice Before Installation

1. The inlet and outlet water unions can't bear the weight of soft pipes. The heat pump must be connected with hard pipes!

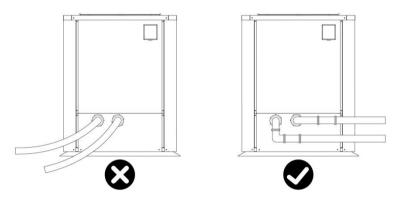

2. In order to guarantee the heating efficiency, the water pipe length should be  $\leq$ 10m between the pool and the heat pump.

### 3.2. Installation Instruction


## 3.2.1 Pre-requirements

## Equipment necessary for the installation of your heat pump:

- ① Power supply cable suitable for the unit's power requirements.
- ② A By-Pass kit and an assembly of PVC tubing suitable for your installation as well as stripper, PVC adhesive and sandpaper.
- 3 A set of wall plugs and expansion screws suitable to attach the unit to your support.
- ④ We recommend that you connect the unit to your installation by means of flexible PVC pipes in order to reduce the transmission of vibrations.
- ⑤ Suitable fastening studs may be used to raise the unit.

## 3.2.2 Heat Pump Installation

- ① The frame must be fixed by bolts (M10) to concrete foundation or brackets. The concrete foundation must be solid; the bracket must be strong enough and anti-rust treated;
- ② The heat pump needs a water pump (Supplied by the user). The recommended pump specification-flux: refer to Technical Parameter, Max. lift ≥10m;
- ③ When the heat pump is running, there will be condensation water discharged from the bottom, please pay attention to it. Please insert the drainage tube (accessory) into the hole and clip it well, then connect a pipe to drain off the condensation water. Install the heat pump, raising it at least 10 cm with solid water-resistant pads, then connect the drainage pipe to the opening located under the pump.

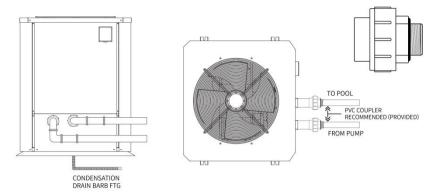


## 3.2.3 Location and Space

Please comply with the following rules concerning the choice of heat pump location.

- ① The unit's future location must be easily accessible for convenient operation and maintenance.
- ② It must be installed on the ground, fixed ideally on a level concrete floor. Ensure that the floor is sufficiently stable and can support the weight of the unit.
- ③ A water drainage device must be provided close to the unit in order to protect the area where it is installed.
- ④ If necessary, the unit may be raised by using suitable mounting pads designed to support its weight.
- ⑤ Check that the unit is properly ventilated, that the air outlet is not facing the windows of neighbouring buildings and that the exhaust air cannot return. In addition, provide sufficient space around the unit for servicing and maintenance operations.
- ⑥ The unit must not be installed in an area exposed to oil, flammable gases, corrosive products, sulphur compounds or close to high frequency equipment.
- To prevent mud splashes, do not install the unit near a road or track.
- To avoid causing nuisance to neighbors, make sure the unit is installed so that it is positioned towards the area that is least sensitive to noise.
- (9) Keep the unit as much as possible out of the reach of children.
- (10) Installation space:

Unit: mm

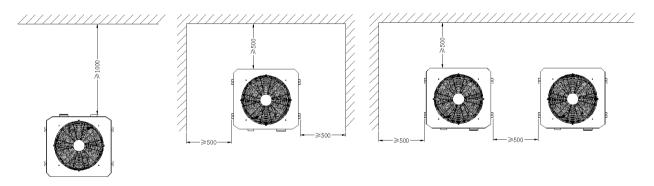

Do not put anything less than one meter in front of the heat pump.

Leave 500 mm of empty space on the sides and back of the heat pump and free ventilation above Do not leave any obstacles above or in front of the device!

## 3.2.4 Installation Layout

Notice: The filter must be cleaned regularly to ensure that water in the system is clean and avoid blocking of filter. It is necessary that drainage valve is fixed on the lower water pipe. If the unit is not running during winter months, please disconnect power supply and let out drain water from unit through drainage valve. If ambient temperature of running unit is below 0°C, please keep water pump running.

#### Installation information

The following information given here is not an instruction, but simply meant to give the user a better understanding of the installation.

#### Condition of installation

The following information given here is not an instruction, but simply meant to give the user a better understanding of the installation.

#### Installation place

Install the swimming pool heat pump on a flat, horizontal, and stable surface. Maintain 1 M of open space in front of the discharge grids and 3 M on the outlet side of the ventilator. And reserve enough space to allow access to temperature controller.

Make sure that the discharged air will not be breathed in.


#### • To perfect your installation


- --Avoid directing the flow of ventilated air towards a sensitive noise zone, such as room window.
- --Avoid positioning pool heat pump on a surface that can transmit vibrations to dwelling.
- --Try to avoid placing appliance under a tree or exposed to water or mud, which would be likely to complicate maintenance.

#### Water connection

Water connection the heat pump is connected to a filtration circuit with a by-pass. It is imperative that the by-pass is placed after the pump and the filter & before any other items such as salt chlorinators or injectors.

The by-pass generally consists of a 3 Way valve and a Non Return. This makes it possible to regulate the water flow which passes through the heat pump and ensures no reverse flow through the heater.

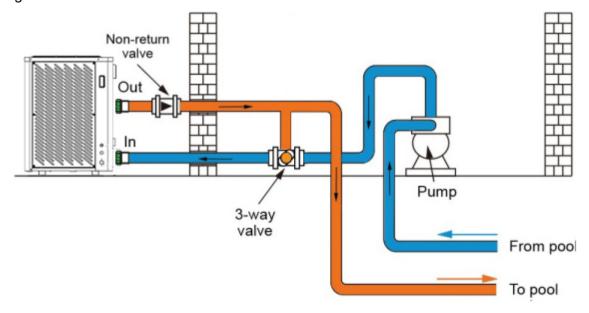

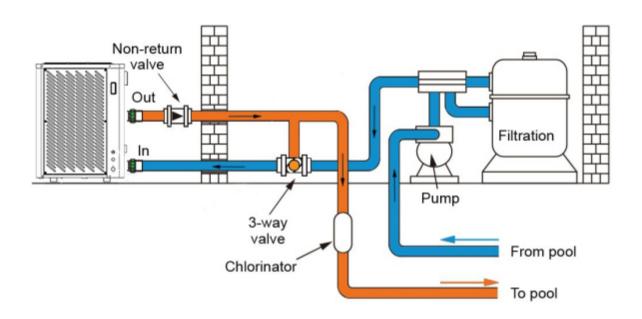

#### 3.3.5 Electrical Installation

To function safely and maintain the integrity of your electrical system, the unit must be connected to a general electricity supply in accordance with the following regulations:

- 1) Upstream, the general electricity supply must be protected by a 30mA differential switch.
- ② The heat pump must be connected to a suitable D-curve circuit breaker in accordance with current standards and regulations in the country where the system is installed.
- ③ The electricity supply cable must be adapted to match the unit's rated power and the length of wiring required by the installation. The cable must be suitable for outdoor use.
- ④ For a three-phase system, it is essential to connect the phases in the correct sequence. If the phases are inverted, the heat pump's compressor will not work.
- ⑤ In places open to the public, it is mandatory to install an emergency stop button close to the heat pump.

Model	Power Supply Wires				
Woder	Electricity Supply	Cable Diameter	Specification		
EFI Ultra V30T	380-415V/3N~/50Hz	5G 6.0mm²	AWG 10		

### 3.3.6 Electrical Connection


**MARNING:** Power supply of heat pump must be disconnected before any operation.

Please comply with the following instruction to connect heat pump.

Step 1: Detach electrical side panel by a screwdriver to access electrical terminal block.

Step 2: Insert cable into heat pump unit port.

Step 3: Connect power supply cable to terminal block according to the diagram below.

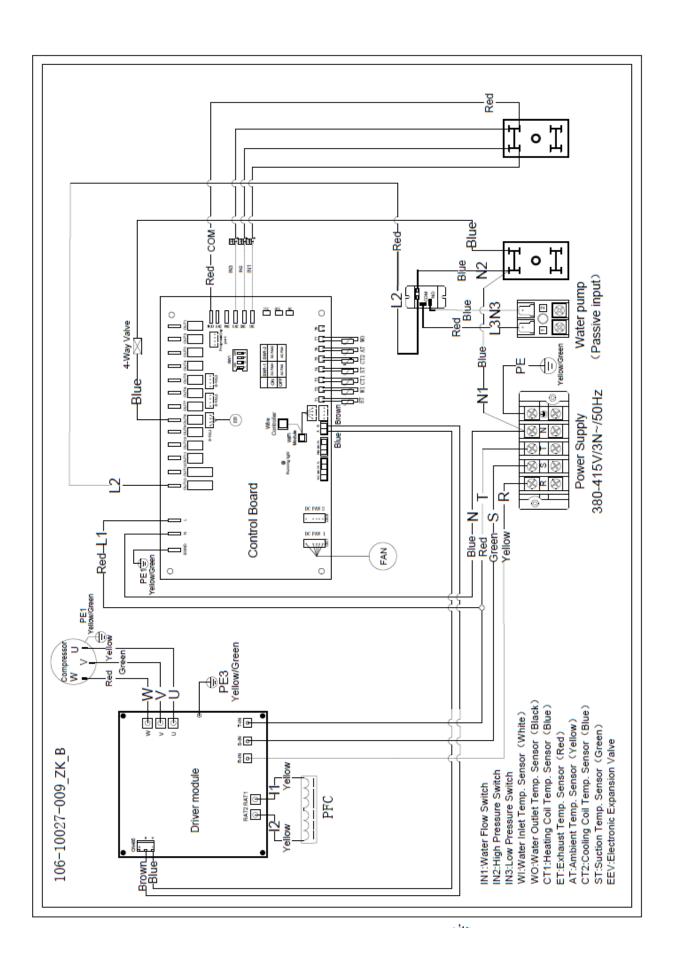

## 3.3. Trial After Installation

**WARNING:** Please check all the wiring carefully before turning on the heat pump.

## 3.4.1 Inspection Before Trial Running

Before running test, confirm below items and write  $\sqrt{ }$  in block;

Correct unit installation
Power supply voltage is the same as unit rated voltage
Correct piping and wiring
Air inlet & outlet port of unit is unblocked
Drainage and venting is unblocked and no water leaking
Leakage protector is working
Piping insulation is working
Ground wire is connected correctly

## 3.4.2 Trial Running

Step 1: Running test can begin after completing all installation;

Step 2: All wiring and piping should be connected well and carefully checked, then fill water tank with water before power is switched on;

Step 3:Emptying all air within pipes and water tank, press "on-off" button on control panel to run the unit at setting temperature;

Step 4: Items need to be checked during running test:

- ① During the first running, unit current is normal or not;
- 2 Each function button on control panel is normal or not;
- 3 Display screen is normal or not;
- 4 Are there any leakage in the whole heating circulation system;
- 5 Condensate drain is normal or not;
- 6 Are there any abnormal sound or vibration during running?

## 4. REMOTE CONTROLLER OPERATION GUIDANCE

## 4.1. Control Panel Diagram



## 4.2. Basic Icons

Icons	Description	Icons	Description
	Heating Mode	攀	Cooling Mode
	Timer	***	Defrosting
Set Temp.	Target Temperature	Water Temp.	Current Temperature

## 4.3. Key Operating Instruction

- 1) "On/Off Key:
  - Click On/Off key on the main interface to turn on or off the unit.
  - Click On/Off key on the other interface to return directly to the main interface.
- 2) "Up Key and "Down Key.
  - In the main interface, click to modify the setting temperature.

- In the parameter checking interface, click "and "and " to turn the page up or down.
- 3) "Return Key.
  - Click to return to the previous interface.
- 4) "Up Key and "Down Key.
  - In the parameter checking interface, click "and "and "to turn the page up or down.
- 5) "On/Off Key.
  - Click On/Off key on the main interface to turn on or off the unit.
- 6) " Mode Key.
  - Click " on the main interface to switch between cooling and heating modes.
- 7) "QCHECK" Query Key.
  - Click "QCHECK" on the main interface to enter main menu.



• Machine status: Click it to enter the unit state parameter query.

	Machine status					
Code	Description	Display Range				
1	Inlet water temp.	-20~99°C				
2	Outlet water temp.	-20~99°C				
3	Ambient temp.	-20~99°C				
4	Exhaust temp.	0~125°C				
5	Suction temp.	-20~99°C				
6	Heating coil temp.	-20~99°C				
7	Cooling coil temp.	-20~99°C				
8	Main EEV steps					
10	Compressor current					
11	Radiator temp.					
12	DC bus voltage					
13	Cmp.Frequency					
14	DC fan1 actual speed					

 System parameter: Click it and enter the code "814", then click "Enter "to query or modify the system parameters.

	System Parameter					
Code	Parameter	Adjustment Range	Initial Value			
1	Return temp. difference	1~18°C (2~36°F)	1°C (2°F)			
2	Cooling set temp.	8°0~35°C (46~95°F)	27°C (81°F)			
3	Heating set temp.	5°C~40°C (41~104°F)	27°C (81°F)			
4	Temp. compensation	-5°℃15°C (-10~30°F)	0°C (0°F)			
5	Def. cycle	20min~90min	45min			
6	Def. start temp.	-9°C~-1°C (16~30°F)	-3°C (27°F)			
7	Def. max time	5min~20min	8min			
8	Def. exit temp.	1°C~40°C (33~104°F)	15°C (68°F)			
9	Def. ambient and coil △T	0°0~15°C (0~30°F)	5°C (10°F)			
10	Def. ambient temp.	0°C~20°C (32~68°F)	17°C (63°F)			
11	EEV working cycle	20s~90s	25s			
12	Smart/Powerful superheat	-5°℃10°C (-10~20°F)	According to the actual model			
13	EEV Exhaust temp.	70°℃125°C (158~257°F)	95°C (203°F)			
14	Def. EEV steps	20~450	According to the actual model			
15	EEV Min. step	5~15 (*10)	According to the actual model			
16	EEV mode	Auto/Manual	Auto			

17	EEV manual step	20~450	350
18	Cooling mode superheat	-5°℃10°C (-10~20°F)	According to the actual model
19	Reserved		
20	Cooling EEV mode	Super-cooling/Temperature	Super-cooling
21	Water pump mode	<ul><li>1 : No stop at constant temp</li><li>2 : Top at constant temp.</li><li>3 : Intermittent running</li></ul>	3
22	Fan mode	Auto/Manual	Auto
23	Fan manual speed	0-99 (*10)	80 (*10)
24	EH start ambient temp.	-10°0~20°C (14~50°F)	0°C (32°F)
25	Def. EH function	Yes/None	Yes
26	Low temp. protection	-30°C~0°C	-20°C

 Factory parameter: Click it and enter the code"4180", then click "Enter" query or modify the factory parameters.

Factory parameter			
Setting Code	Parameter	Adjustment Range	Initial Value
F1	Frequency set_1	20~120Hz	20 Hz
F2	Frequency set_2	20~120Hz	24 Hz
F3	Frequency set_3	20~120Hz	28 Hz
F4	Frequency set_4	20~120Hz	32 Hz
F5	Frequency set_5	20~120Hz	36 Hz
F6	Frequency set_6	20~120Hz	40 Hz
F7	Frequency set_7	20~120Hz	44 Hz
F8	Frequency set_8	20~120Hz	46 Hz
F9	Frequency set_9	20~120Hz	58 Hz
F10	Frequency set_10	20~120Hz	68 Hz
F11	Exhaust temp. set_1	50~125°C (122~257°F)	95°C(203°F)
F12	Exhaust temp. set_2	50~125°C (122~257°F)	100°C(212°F)
F13	Exhaust temp. set_3	50~125°C (122~257°F)	105°C(221°F)
F14	Exhaust temp. set_4	50~125°C (122~257°F)	110°C(230°F)
F15	Exhaust temp. set_5	80~125°C (176~257°F)	115°C(248°F)
F16	DC fan speed_1	0~99 RPM	52 (*10)
F17	DC fan speed_2	0~99 RPM	58 (*10)
F18	DC fan speed_3	0~99 RPM	64 (*10)
F19	DC fan speed_4	0~99 RPM	72 (*10)
F20	DC fan speed_5	0~99 RPM	78 (*10)
F21	DC fan speed_6	0~99 RPM	84 (*10)
F22	Silent mode superheat	-5~10°C (-10~20°F)	According to the actual model

F23	Machine type	0:Heating & Cooling 1:Heating ONLY 2:Cooling ONLY	0
F24	Constant temp. superheat	-5~10°C (-10~20°F)	According to the actual model
F25	Frequency set_11	20~120Hz	70 Hz
F26	Frequency set_12	20~120Hz	74 Hz
F27	Frequency set_13	20~120Hz	78 Hz
F28	Frequency set_14	20~120Hz	82 Hz
F29	Frequency set_15	20~120Hz	84 Hz
F30	Frequency set_16	20~120Hz	86 Hz
F31	Frequency set_17	20~120Hz	88 Hz
F32	Frequency set_18	20~120Hz	90 Hz

## Timer Setting.



## 8) Date and Clock Setting.



• In the clock setting interface, click "Confirm" to confirm the time settings.

- 9) "SILENT" Function Key.
  - Click "SILENT" on the main interface to switch powerful mode, smart mode, and silent mode.

## 4.4. System Protection and Error Code

Error Code	Error Description		
Er 03	Water flow switch failure		
Er 04	Anti-freezing in winter		
Er 05	High pressure failure		
Er 06	Low pressure failure		
Er 09	Communication failure between main control board and wire controller		
Er 10	Communication failure of inverter module(Alarm when the communication between the external board and the driver board is disconnected)		
Er 12	Exhaust over heat protection		
Er 15	Water Inlet temperature sensor failure		
Er 16	External coil temperature sensor failure		
Er 18	Exhaust temperature sensor failure		
Er 20	Inverter module abnormal protection		
Er 21	Ambient temperature sensor failure		
Er 23	Outlet water low temp. Protection		
Er 27	Water outlet temperature sensor failure		
Er 28	CT over current protection		
Er 29	Water inlet temperature sensor failure		
Er 32	Outlet Water Over Heat Protection		
Er 33	Heating Coil Over Heat Protection		
Er 42	Internal coil temperature sensor failure		

E20 fault will display the following error codes at the same time, the error codes will switch every 3 seconds. Among them, error codes 1-128 appear in priority. When error codes 1-128 don't appear, then it will show error codes 257-384. If two or more error codes appear at the same time, then display error codes accumulation. For example, 16 and 32 occur at the same time, it will show 48.

Code	Parameters Meaning	Fault Solution	
		The compressor is temporarily overloaded (for example, liquid	
1		compression)	
	Compressor	2. The program does not match the compressor	
	•	3. The U, V, and W lines of the compressor are inversely connected, and the	
	Over-current	compressor reverses	
		4. Compressor wear (lack of oil, liquid compression lead to wear cylinder	
		block)	
	Compressor out of	The compressor is temporarily overloaded (for example, liquid	
2	Compressor out of	compression)	
	step	The program does not match the compressor	
		3. The compressor start pressure difference is too high and low.	
	Compressor phase	1. Cables U, V, and W of the compressor are missed or improperly connected	
8	loss	2. The program does not match the compressor	
	1055	3. The compressor starts too high and low pressure difference	
1		1. Check whether the AC voltage is abnormal	
16	DC voltage is too low	2. AC power is suddenly cut off, and the DC voltage will be too low when the	
		converter capacitor is left for the chip to work	
00	DC voltage is too	Check whether the AC veltere is above and	
32	high	Check whether the AC voltage is abnormal	
	9	Check whether the communication cable is improperly connected	
	Communication is	Check whether the baud rate and communication address code are set	
257		according to the communication protocol	
	abnormal	Replace the driving board for testing	
		The current transformer on the driving board is damaged during	
		transportation	
	AC phase loss or CT	Check whether the current transformer is improperly inserted during	
258	is disconnected	production	
	is disconnected	3. The AC current at the frequency above 40Hz is very small, resulting in	
		abnormal detection of the current transformer	
		1. AC overcurrent (currently available for external models with a separate filter	
	AC aver average as	board), the load is suddenly too large to reduce the frequency	
	AC over-current or	2. Compressor overpower (combined plate, three-phase 380V, no single filter	
260	compressor	plate model) the load is suddenly too large to reduce the frequency too late	
	overpower	3. Compressor overpower (combined plate, three-phase 380V, models	
	overpower	without separate filter plate) The compressor starts too high and low pressure	
		difference	
	IDM	1. The heat dissipation is poor. The condensing fan rotates at a low speed or	
288	IPM over heat	stops unexpectedly	
200	protection	2. The ambient temperature rises too fast, leading to too late reaction of	
		over-temperature frequency reduction	

		The compressor is temporarily overloaded (for example, liquid
		compression)
	Compressor current	2. The program does not match the compressor
320	'	3. The U, V, and W lines of the compressor are inversely connected, and the
	protection	compressor reverses
		4. Compressor wear (lack of oil, liquid compression lead to wear cylinder
		block)
		1. The heat dissipation is poor. The condensing fan rotates at a low speed or
384	PFC module over	stops unexpectedly
	heat protection	2. The loop temperature rises too fast, leading to too late reaction of
	'	over-temperature frequency reduction

## 4.5. Other Malfunctions and Solutions (No display on wire controller)

Malfunctions	Observation	Reasons	Solution
	Wire controller shows	No power supply	Check whether cable and circuit
	no display		breaker are connected
	Wire controller	Heat pump under standby	Start up heat pump to run.
	displays the actual time	status	otart up nout pump to run.
Heat pump is		1. Water temperature is	Verify water temperature
not running	Wire controller	reaching set value, heat pump	setting
		under constant temperature	2. Start up heat pump after a
	displays the actual water temperature	status	few minutes
		2. Heat pump just starts to run	3. Wire controller should display
		3. Under defrosting	"Defrosting"
			1. Adjust the mode
Water temperature is cooling when heat pump runs under heating mode			2. Replace the defect wire
	Wire controller displays actual water temperature and no error code displays		controller, and then check the
		1. Chose the wrong mode	status after changing the
		2. Figures show defects	running mode, verifying the
		3. Controller defect	water inlet and outlet
			temperature
			3. Replace or repair the heat
			pump

Short running	Wire controller displays actual water temperature, no error code displays	1. Fan can't run 2. Not enough air ventilation 3.Not enough refrigerant	1. Check the cable connections between the motor and fan, if necessary, they should be replaced 2. Check the location of the heat pump, and eliminate all obstacles to assure a good air ventilation 3 Replace or repair the heat pump
water stains	Water stains on heat pump unit	Condensed water     Water leakage	No action     Check the titanium heat     exchanger carefully if it shows     any defects
Too much ice on evaporator	Too much ice on evaporator		1. Check the location of heat pump, and eliminate all obstacles to assure a good air ventilation  2. Replace or repair the heat pump

## 5. WI-FI MODULE AND APP USER INSTRUCTION

## 5.1. Wi-Fi Box




NO.	Icon	Key Name	Key Function
1	0	Network distribution button	Long press 3 seconds to enter EZ mode; After powering on for 10 seconds, you can press the button for 5 times within 5 seconds to enter AP mode.
2	<b>(b)</b>	Power indicator	When power is on, the lower indicator lights up.
3	<b>((•))</b>	Wi-Fi connection indicator	After Wi-Fi is connected, the lower indicator light is always on;
4	<b>%</b>	Communication indicator	<ol> <li>when entering EZ mode, the lower indicator flashes quickly;</li> <li>When entering AP mode, the lower indicator slowly;</li> <li>After the distribution network connection is successful, the lower indicator represents the main control power on and off status.</li> </ol>

## 5.2. Wi-Fi Function

## 5.2.1 Software Installation

① Method 1: Search "Smart life" in your APP store, install " ".Click "GET" to install.

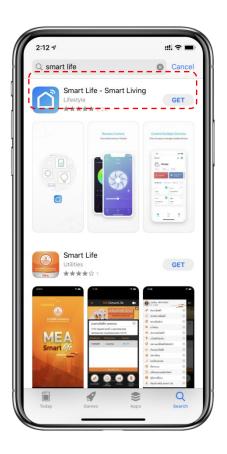

2 Method 2: Scan the QR code below.



## 5.2.2 Software Startup


After installation, click " on your desktop to start up Smart Life.




## 5.2.3 Software Registration and Configuration

## 1. Registration

① Users don't have account can click "Register" to create an account: Register Enter your phone number Get Verification Code Enter Verification Code Set Code;

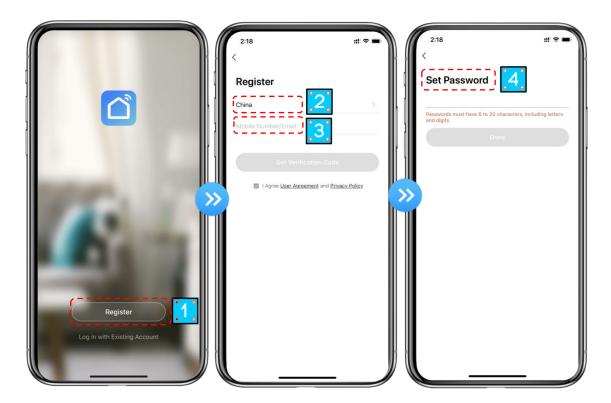


② After registration, you need to create a Home: Create a Home Set Home Name Set Home Location Add Rooms.

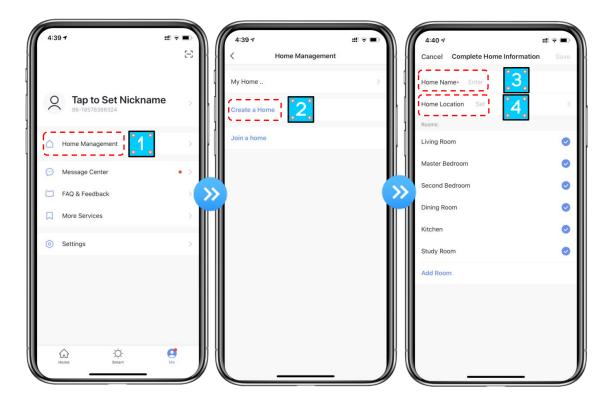


## 2. Account ID+ Password Login


① Existing accounts can be logged in directly, in the following order.

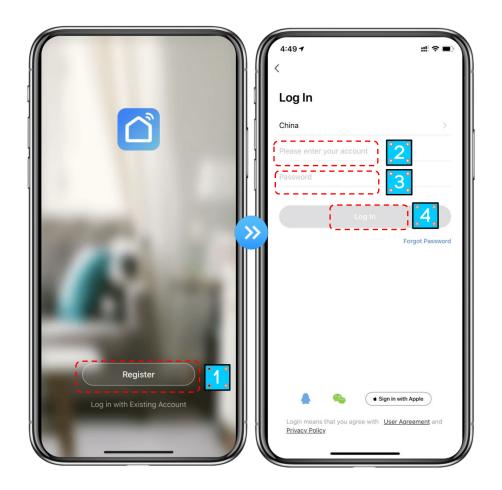

② If you forget your password you can choose to login with your verification code and select "Forget Password": Enter your phone number Get verification code.

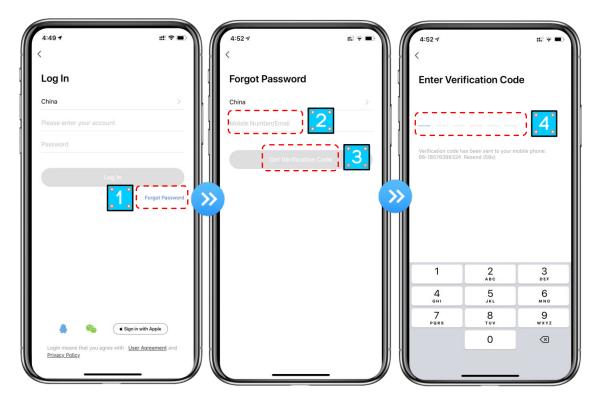

3 After creating a home or logged in, enter the main interface of APP.

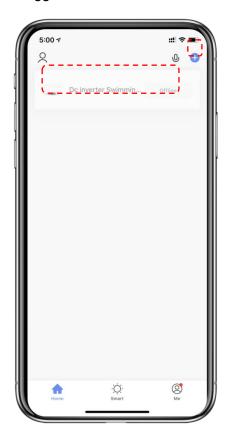

#### Note:

Click the device to check the status, and you can set the operating mode, ON/OFF, timer. Click "+" to add devices.

## 3. Wi-Fi Module configuration steps:

## Method 1


## Step 1:

When power is on, if there is no distribution network, it will automatically connect through the EZ mode by default. At this moment, the indicator light under "\$3" flashes rapidly (2 times per second), mobile phone can connect it.

Manually enter the EZ mode: 10s after power on, long press on "©" for 3s to enter EZ mode, the the indicator light under "\$" flashes rapidly (2 times per second), mobile phone can connect it.


### Step 2:

Turn on the phone's Wi-Fi function and connect to the Wi-Fi hot-spot. The Wi-Fi hot-spot must be able to connect to the Internet normally;

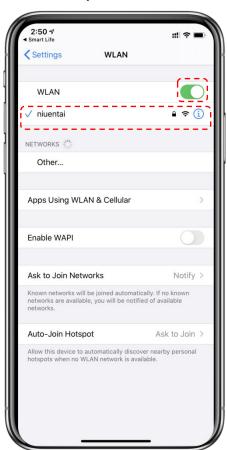

#### Step 3:


Open the "smart life" APP, log in into the main interface, click on the top right corner "+" or "add equipment" of the interface, enter the equipment type selection, the "Large Home Appliances", select "Smart Heat Pump" equipment and add equipment into the interface.

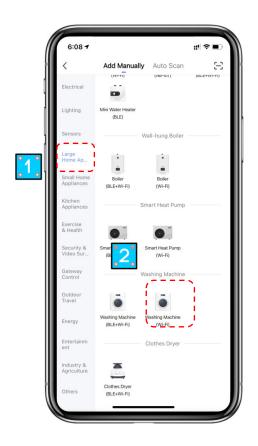

## Step 4:


After selecting "Smart Heat Pump", enter the interface of "Add Equipment", and confirm that the wire controller has selected the EZ mode. After the indicator light under "\$" flashes rapidly, click" Confirm indicator rapidly blink ".

Enter the Wi-Fi connection interface, enter the Wi-Fi password of the mobile phone (it must be the same as the Wi-Fi of the mobile phone), click "Next", and then directly enter the connected status of the device.

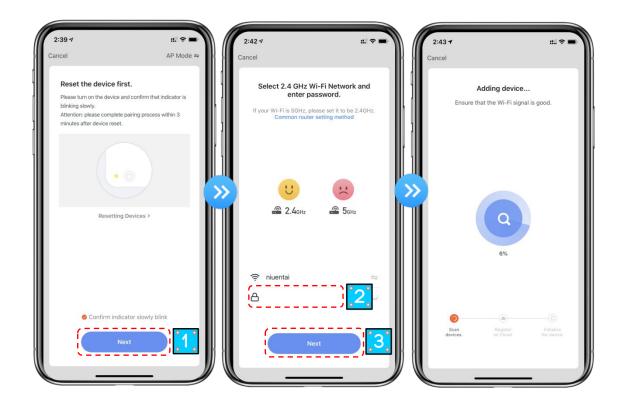

## Step 5:

When "Scan devices", "Register on Cloud", "Initialize the device" are all completed, connect succeeds.

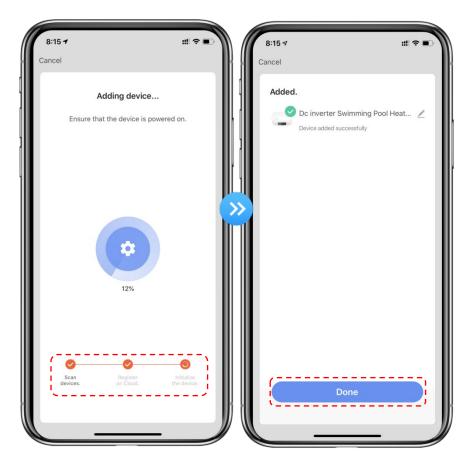

#### Method 2

#### Step 1


Manually enter AP mode: 10s after power on, click "©" 5 times within 5s to enter AP mode. The indicator under "\$" flashes slowly (1 time every 3s), mobile phone can connect it.

## **Step 2&3**


Same with intelligent distribution network above.

#### Step 4

After entering the add device interface, click "EZ Mode" in the upper right corner; Enter the AP mode to add the device interface, confirm that the AP mode has been selected ("\$"icon flashes), and click "Confirm indicator slowly blink".

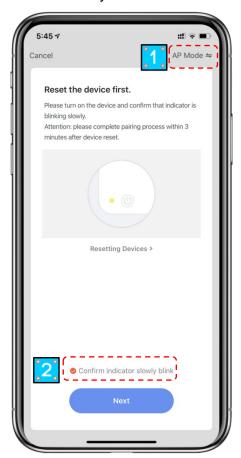

The interface of Wi-Fi connection will pop up, enter the Wi-Fi password of the mobile phone (it must be the same as the Wi-Fi of the mobile phone), click "Next", "Connect your mobile phone to the device's hot spot" will pop up, and click "Go to Connect";

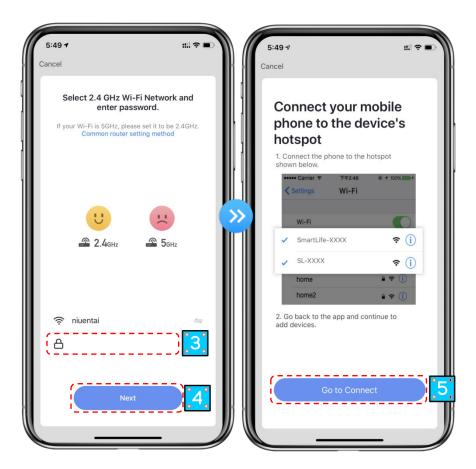

Enter the mobile phone Wi-Fi connection interface, find the "Smart-Life\_XXXX" connection, and the APP will automatically enter the device connection status.



Step 5: Same as EZ mode above.

**Note:** If the connection is failed, please enter the AP mode manually and reconnect according to the above steps.

#### **5.2.4 Software Function Operation**

- After the device is bound successfully, enter the operation interface of "Smart heat pump" (Device name, modifiable)
- In the main interface of "Smart Life", click "Smart heat pump" to enter the operation interface.



- ① Back
- ② More: You can change device name, select device installation location, check networking status, add Shared users, create device cluster, view device information, and more.
- 3 Setting temperature adjustment: The white circle slides counterclockwise to reduce the temperature, but clockwise to increase the temperature.
- 4 Target temperature
- 5 Current temperature
- 6 Mode switching: Click to select the mode to be switched.
- (7) ON/OFF
- 8 Timing: Click to add timing off/on time.


#### Modify device name

Click in the following order to enter device details, and click "Device Name" to rename the device.




## Device sharing


- ◆ To share a bound device, the user should do so in the following order.
- ◆ After successful sharing, the list will be added to show the person shared
- ◆ If you want to delete the account you shared to, cross the selected account to the left, and delete it.
- ◆ The user interface is as follows.

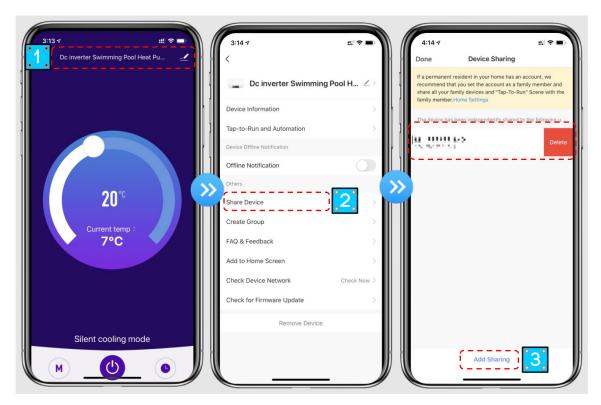

• Enter the account of the shared, click "Done", and the share success list shows the newly added account of the Shared.

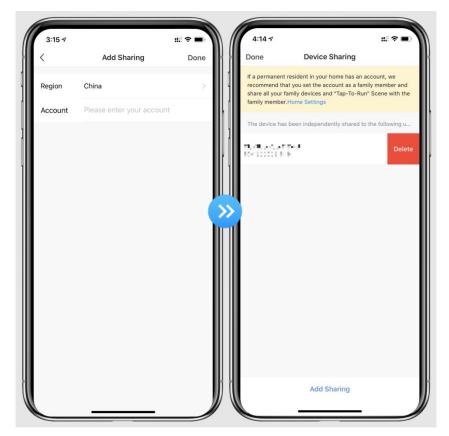

♦ The interface of the person to be shared is as follows. The received shared device is displayed. Click it to operate and control the device.

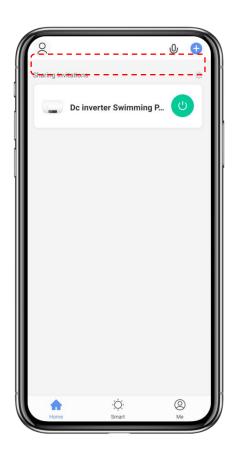

# Mode settings

Click " M " on the main interface to switch modes, select what you need.




# • Timer setting

1. Click " on the main interface to enter timer setting interface, as shown below, click to add timer.



2. After entering timer setting, swipe up/down to set timer, set up repeat weeks and on/off, then click "save" to save your settings as follows.

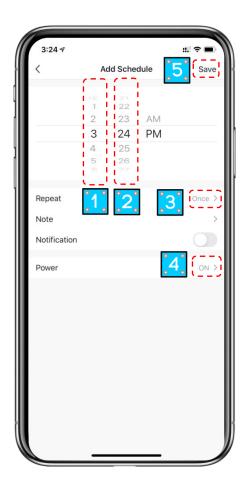

- ① Hours
- ② Minutes
- 3 Set the repetition
- 4 Set power ON/OFF
- 5 Save your modification


#### 5.2.5 Device Removal

#### 1. By Wi-Fi module

When you need to remove the device, long press on "②" for 3s to remove the device and enter EZ mode again. The indicator light under "\$3" flashes rapidly for 3min, the network can be re-matched, or quit it if no operation within 3 minutes.

### 2. By APP

Click "Z" on the top right corner of the main interface to enter the device details interface, and click "device removal" to enter EZ mode. Indicator light under "Z" flashes rapidly for 3min, the network can be reconfigured within 3 minutes, and the network can be quit if it is not connected within 3 minutes. The specific operations are shown as follows.

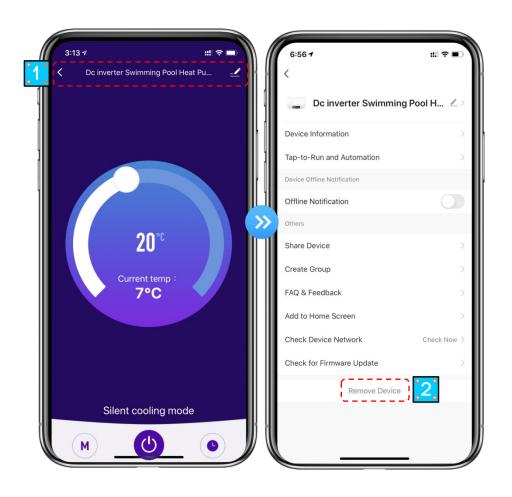

#### 6. MAINTENANCE AND WINTERZING

#### 6.1. Maintenance

**WARNING:** Before undertaking maintenance work on the unit, ensure that you have disconnected the electrical power supply.

#### Cleaning

- a. The heat pump's casing must be cleaned with a damp cloth. The use of detergents or other household products could damage the surface of the casing and affect its properties.
- b. The evaporator at the rear of the heat pump must be carefully cleaned with a vacuum cleaner and soft brush attachment.

#### Annual maintenance

The following operations must be undertaken by a qualified person at least once a year.

- a. Carry out safety checks.
- b. Check the integrity of the electrical wiring.
- c. Check the earthing connections.
- d. Monitor the state of the pressure gauge and the presence of refrigerant.


## 6.2. Winterizing



"CUT OFF" power supply of the heater before cleaning, examination and repairing

In winter season when you don't swim:

- a. Cut off power supply to prevent any machine damage.
- b. Drain water clear of the machine.

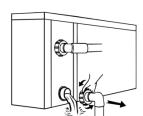



!! Important:

Unscrew the water nozzle of inlet pipe to let the water flow out. When the water in machine freezes in winter season, the titanium heat exchanger may be damaged.

c. Cover the machine body when not in use.